

here is your
REK-O-KUT
STROBE DISC

Place strobe disc on center spindle. Select speed hand to be checked. Start player at speed to be checked. View lines under 60-cycle illumination. When lines are stationary, turntable speed is accurate. Lines moving to the left indicate speed is too fast. Lines moving to the right indicate speed is too slow.

Your Rek-O-Kut Strobe Disc should last to the end—
So be a good scout—
give the spare to a friend!

